



**1853706**


## **X-Calisto Console-VT**

### **Parts List**


|    |                                     |       |
|----|-------------------------------------|-------|
| A. | Top Assembly                        | 1 pc  |
| B. | Front Support                       | 1 pc  |
| C. | Back Supports                       | 2 pcs |
| D. | Connector                           | 1 pc  |
| E. | Base Assembly                       | 1 pc  |
| F. | Long Allen Head Bolts               | 3 pcs |
| G. | Short Allen Head Bolts              | 4 pcs |
| H. | Lock Washers                        | 7 pcs |
| I. | Flat Washers                        | 7 pcs |
| J. | Allen Head Wrench                   | 1 pc  |
| K. | Optional Allen Head Screwdriver Bit | 1 pc  |

- \* Please make sure you have all the parts and hardware indicated above before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.


### **Hardware Illustrations**

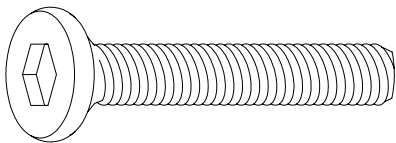


**F. Long Allen Head Bolt**

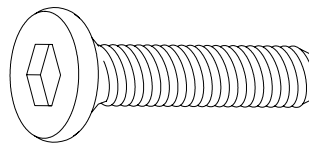

**G. Short Allen Head Bolt**



**H. Lock Washer**



**I. Flat Washer**



1853706

## X-Calisto Console-VT

### Assembly Instructions

1. **Attach Front & Back Supports (B, C)** Put the Top Assembly (A) upside down on a soft surface. Insert the dowels of Front Support (B) into the pre-drilled holes in the front rail of Top Assembly (A) so that the pre-drilled hole in the Front Support (B) aligns with the pre-threaded hole in the apron of Top Assembly (A). Secure, but do not fully tighten, with Long Allen Head Bolt (F), Lock Washer (H) and Flat Washer (I) using Allen Head Tool (J or K). Repeat above step to attach Back Supports (C) to the Top Assembly (A). See illustration #1.
2. **Attach Connector (D)** Insert the dowels of Connector (D) into the pre-drilled holes in the ends of Front & Back Supports (B, C). Ensure the round side is down. See illustration #1.
3. **Attach Base Assembly (E)** Put Base Assembly (E) upside down. Adjust and align the pre-drilled holes in the Base Assembly (E) with the pre-threaded holes in the Front & Back Supports (B, C) and Connector (D). Secure, but do not fully tighten, with Short Allen Head Bolt (G), Lock Washer (H) and Flat Washer (I) using Allen Head Tool (J or K). See illustration #1.
4. **Tighen all bolts at this time and put the item upright.**

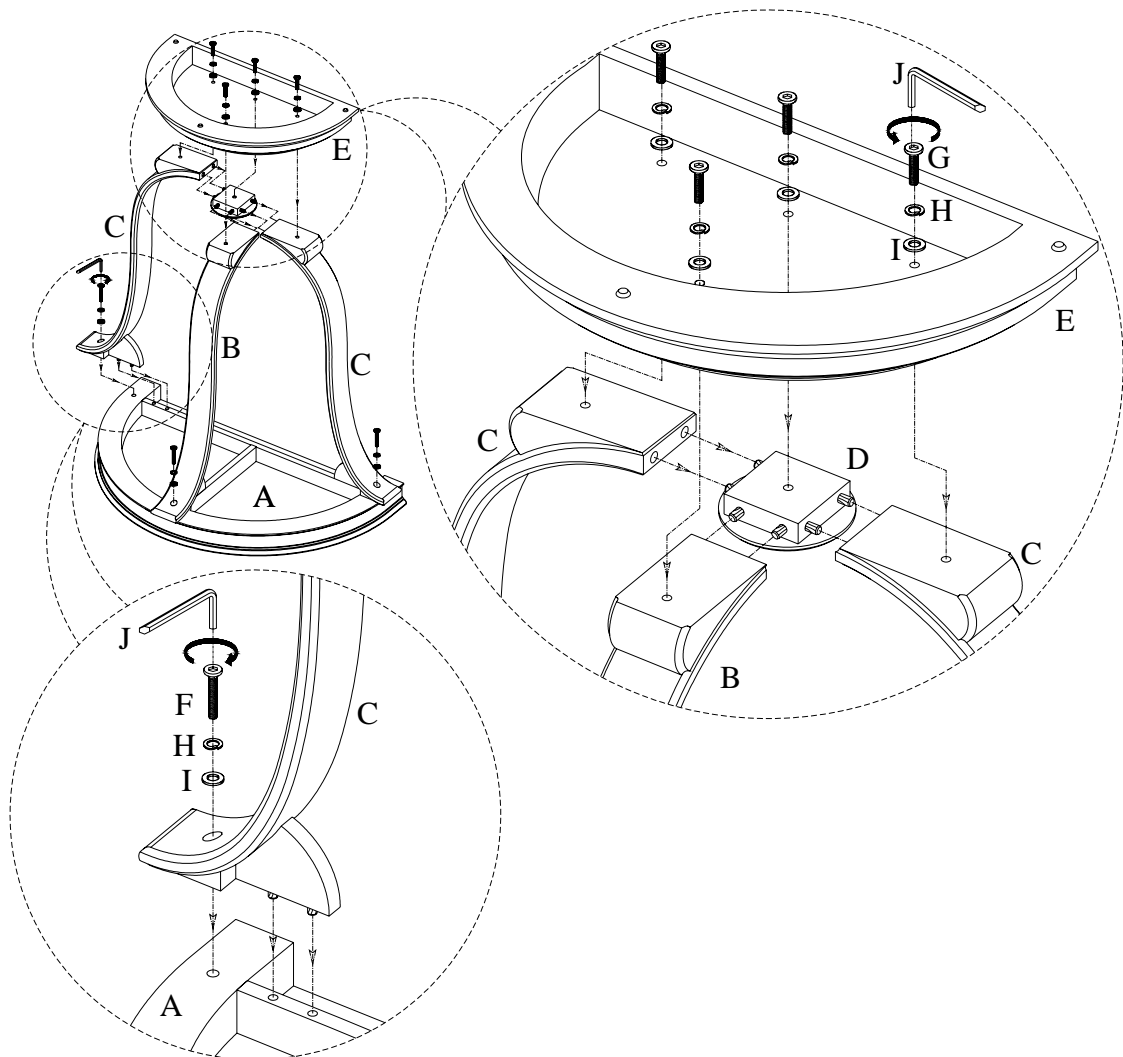


Illustration # 1